




GENERATOR INTERCONNECTION

Phone: 817.444.3201 ★ tcectexas.com

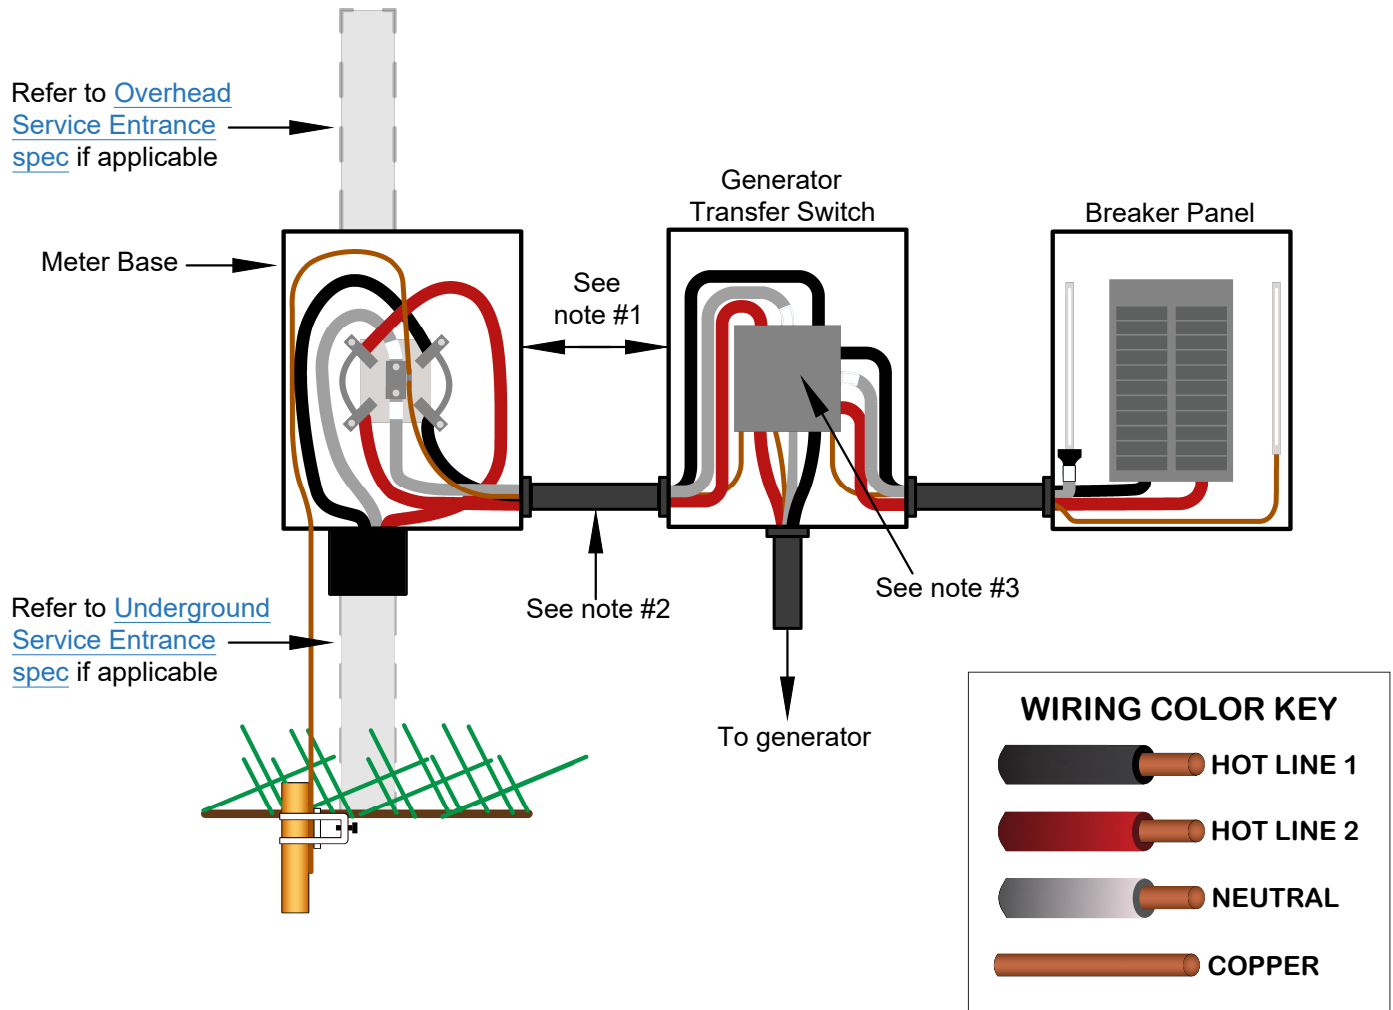

NOTES:

1. Generator transfer switch must be located within 3 feet of the Tri-County Electric Cooperative meter if being used as a service disconnect. Otherwise, transfer switch must be located within 6 feet of meter.
2. Conduit between the meter and service disconnect must be rigid metal conduit or EMT.
3. Transfer switches must be UL listed (1008, not 1008M). Interlock kits are not accepted. Meter-mount transfer switches are not accepted.
4. Transfer switch must be service-rated to be used as a service disconnect.
5. Neutral/ground bond must be located in the first service-rated disconnect, either the service-rated transfer switch or an external service disconnect.
6. Sub-panel generator interconnections are acceptable if the transfer switch still meets the requirements of this spec.
7. Refer to [Authorized and Unauthorized Devices spec](#) for acceptable connections. No piercing connections or Polaris plugs will be accepted in the meter base, transfer switch, or breaker panel.
8. Refer to the [Installation Requirements: Rod + Pipe Electrodes spec](#) for ground rod installation guidelines.
9. All conductors must meet or exceed NEC code.